



KITCHENS FOR INDEPENDENCE

ACCESSIBILITY AND FREEDOM IN THE KITCHEN

ROPOX™
BETTER WAYS TO BETTER DAYS

 **ProCare
Innovations**
TRANSFORMING CARE, IMPROVING LIFE



The multifunctional kitchen

ROPOX CAN ADJUST

- Activity and Island Tables
- Worktop Systems
- Wall Cabinets

YOUR SPACE, YOUR WAY THE BEST KITCHEN

The Ropox adjustable kitchens are innovative solutions for mixed use and various settings. Multi-functional kitchens are flexible and offer a wide range of individual solutions for private homes, schools, life plan communities, senior housing, training and commercial kitchens. All height-adjustable systems can be hidden and operated either electrically or manually. Easy to fit, the systems are stable and safe and made only of top quality materials.



Ideal both as dining and work table.



Custom-made solutions are available.



Ropox braked castors.

ROPOX

4Single frame

- Ideal for the whole family – adults, children and wheelchair users.
- Can be used for a multitude of activities in the kitchen including computer work or art as well as food preparation.
- Two height ranges of 12" (21½" - 33½" or 25½" – 37½").
- Adjust the height simply by the push of a button or by using a winding handle or remote control.
- Custom-sized frames to fit any kitchen worktop or dining tabletop – up to 9¾' x 6½' (ft)
- Cooktops and sinks may be integrated as needed.
- Optional braked castors make it easy to move the table, but standard adjustable feet or hidden floor fixings may be used.
- A rechargeable battery option means the electric version is easily mobile.
- Fully charged batteries can last up to 3 months.
- The frame is designed to withstand a load of up to 330 lbs. (optional upgrade to 551 lb.)




Ropox worktop systems


THE WORKTOP REACHES NEW HEIGHTS

Having the worktop adjusted to the perfect height, makes a big difference for each activity. Different heights are needed to knead dough, stir pots, chop vegetables or wash up.

It's a huge advantage to be able to adjust the worktop height – whether standing or seated, promoting self-sufficiency and optimal working conditions in the kitchen is important. What's more, our solutions offer seated users more leg space and the freedom to move around with ease.

Easy height adjustment of the FlexiCorner worktop makes it ideal for one person use.

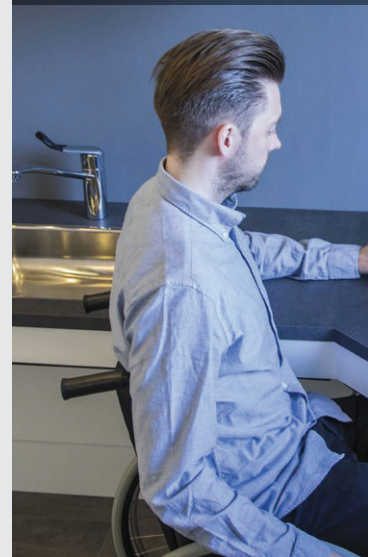

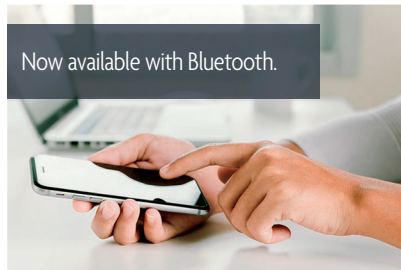

ROPOX

FlexiElectric/FlexiManual/FlexiCorner

- FlexiElectric is optimal for frequent and independent use. FlexiManual for less frequent adjustment.
- Ideal for private homes, schools, training kitchens, senior housing, nursing homes, etc.
- Custom-sized frames to fit all types of kitchen worktops in lengths from 2' – 9¾' (ft).
- FlexiCorner suits single person use and can be customized to any size up to 9¾' x 9¾' (ft).
- Sinks and cooktops can be integrated into the worktop.
- Easy to adjust in height, manually or electrically.
- Concealment panels can hide the legs and plumbing or use leg covers for extra access space.
- For added safety we always recommend safety stops for electric systems to avoid the risk of trapping.
- Smartboxes are used to link safety systems where moving work tops are adjacent or have wall cabinet systems above.



ROPOX

FlexiBasic


- Ideal for places where occasional height adjustments may be needed.
- Cost-effective solution for senior housing or homes for disabled people with multiple kitchens.
- Worktops are adjustable by 12" up to lengths of 9¾' (ft). Sinks and cooktops may be integrated.
- Height adjustment using Ropox lifting unit which can be carried between kitchens by a caretaker/handyman.




ROPOX

Worktop brackets

- For places with only rare requirements for height adjustment.
- Requires two people to lift and adjust the height.

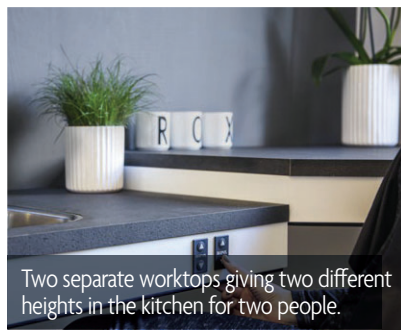

Two separate worktops giving two different heights in the kitchen for two people.

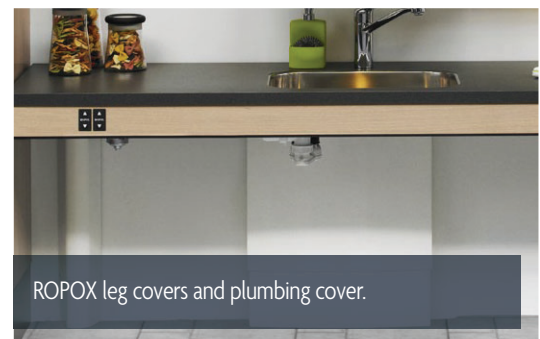

ROPOX leg covers and plumbing cover.



Ropox wall cabinets

WALL CABINETS THAT COME TO YOU

Having the countertop adjusted to the perfect height makes a big difference for each activity. Different heights are needed to prepare food, stir pots, chop vegetables and wash dishes.

It is a major advantage to be able to adjust the counter height – whether standing or seated, promoting self-sufficiency and optimal working conditions in the kitchen. What's more, our solutions offer seated users more leg space and the freedom to move around with ease.

Safety stop plate with integrated spotlight.

Press pads for adjustment of wall cabinets and worktop.





ROPOX

Vertilinside (electric vertical height adjustment)

- Fitted inside the cabinet (standard widths between 15¾" – 39½").
- An excellent adaptation solution for existing units.
- Invisible from the outside.
- Adjustable down by 19½".
- Designed to withstand loads up to 176 lbs.
- Height adjustable shelves.
- Lighting can be integrated in bottom safety stop plate.



ROPOX

Diagonal (electric diagonal height adjustment)

- Adjusts in a smooth diagonal motion – 17" down and 7" forward.
- Frame depth only 4½", hidden when cabinet is mounted.
- Frames are available for cabinet widths from 15¾" – 47" or 51" – 71".
- Designed to withstand loads up to 264 lbs./485 lbs.
- Lighting can be fitted in safety stop plate.




ROPOX


Brackets for wall cabinets

- Brackets enable stepped height adjustment of wall cabinets for very occasional adjustment. Cabinets are lifted off and placed at another height.
- Fitted on the back of the cabinets and therefore invisible.
- Height adjustment of cabinets in intervals of 1½".
- Designed to withstand loads up to 198 lbs.

ROPOX WALL CABINETS

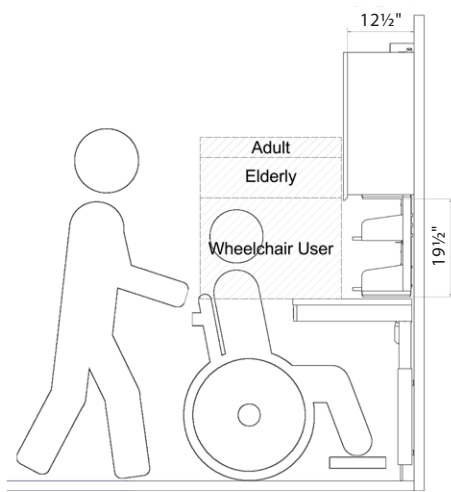

Ropox VertiInside

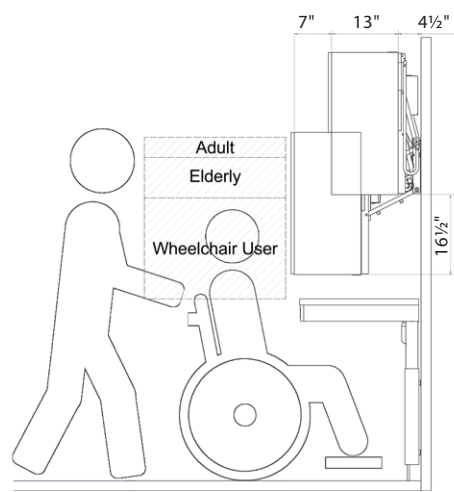

Ropox Diagonal

OPTIMAL WORKTOP HEIGHTS

- Wheelchair users: 27½" – 31½"
- Elderly: 33½"
- Adults: 35½" – 37½"

SAFETY IN FOCUS...



We recommend safety stop plates below all Ropox wall cabinets to avoid the risk of trapping. For further safety, wall cabinets can be connected to worktop frames via Ropox Smartboxes to avoid the trapping risk between wall cabinets and worktops, particularly when the worktops are moved up.



Ropox Smartboxes can avoid the trapping risk between height adjustable worktops installed next to each other. It's important that the side and front fascias have no worktop overhang.



Ropox safety strips ensure that worktops don't just stop, but reverse their movement immediately when activated.



ROPOX TABLES

BEAUTIFUL HEIGHT-ADJUSTABLE TABLES FOR INDIVIDUAL NEEDS



ROPOX KITCHENS

FLEXIBLE AND HEIGHT-ADJUSTABLE KITCHENS



ROPOX BATHROOMS

INNOVATIVE AND EXCITING PRODUCTS FOR SAFETY AND COMFORT



SCAN TO VIEW VIDEOS