



Owner's Manual

*Use and Care
Troubleshooting
Warranty Information*

VANCARE, Inc.
1515 1st St Aurora, NE 68818
1 (800) 694-4525
www.vancare.com

Table of Contents

P-600 Lift

Introduction	3
Overview	3
Components of lift system	4
Component List	5
Specifications	5
Cautions	7
Operation	
Turning the lift ON/OFF	8
Raising/lowering the lift	9
Moving the lift along the track	10
Mounting the lift to the track	11
Basics in transferring an individual	12
Charging the lift	14
Emergency Lowering	15
Emergency Stopping and Shut-Off	15
Attaching the airline to the lift	16
LCD Display Functionality	17
Cleaning, Disinfection and Sterilization	19
Turning the Hooks Upwards	19
Trouble Shooting	20
General inspection and maintenance	21
Lift accessories	22
Service record history	23



CAUTION: DO NOT ATTEMPT TO USE THIS EQUIPMENT WITHOUT FIRST UNDERSTANDING THE CONTENTS OF THIS MANUAL.

Introduction

Before using this equipment, and to ensure the safe operation of your **P-600** lift carefully read this entire manual, especially the section on “**Cautions**”. The **P-600** is designed to be used in conjunction with Xceptg lift track, accessories and slings. Please refer to any user guides supplied with these components and reference them while reviewing this manual.

Should any questions arise from reviewing this manual contact your local authorized Xceptg dealer. Failure to comply with warnings in this manual may result in injury to the operator, or the individual being lifted/transferred. Damage to the lift and/or related components may occur. Be sure that the contents of this manual are completely understood prior to using this piece of equipment.

Store this manual with the documents included with the lift system and sling (s). Contents of this manual are subject to change without prior written notice.

Overview of P-600 lift system

The **P-600** lift is a lifting aid used by health care professionals and those providing care in the home to lift, position and transfer clients or a disabled family member. The **P-600** lift is part of what is termed ceiling lift technology which takes advantage of lifting from above and not from below or the side. Additionally the ceiling lift does not take up valuable floor space as most traditional methods do. Finally, the ceiling lift makes it possible to move mobility impaired individuals with minimal strain or risk to the caregiver, while providing complete safety, dignity and comfort for the client or family member.

The **P-600** lift is one of four major components that make up this technology. The other three components are the track, trolley and sling. The **P-600** lift runs on the lift track which is securely mounted to the ceiling structure of the institution, or home with the use of ceiling brackets. The track itself is made of specially designed aluminum and comes in many different shapes, lengths and configurations, and is custom tailored and installed to meet your specific requirements. The third component, the sling, is a specially designed fabric accessory that attaches to the lift by means of an integral carry bar and straps, and holds an individual while the lift, positioning or transfer takes place. The fourth component, the trolley, is mounted inside the track and has wheels that allow the lift to move along the track. The lift attaches to the trolley by means of the eyelet of the trolley. The track, trolley and sling are supplied with the lift at the initial time of purchase.

The **P-600** lift is a portable ceiling lift. It is designed to be easily moved from one track location to another. Track are typically installed in the bedroom, bathroom and/or the living room. The **P-600** lift has the ability to lift an individual up from one location such as bed, move the individual along the track to another location and finally lower the individual into a chair or bathtub. It is moved along the track manually with the aid of a caregiver. The functions of lifting up or down are accomplished by pressing the buttons of a pneumatically (air) operated hand control. The hand control is attached to the lift by way of a rubber airline tubing. The **P-600** lift is powered by batteries and it is supplied with an easy to use battery charger.

Please refer to figure 1A to see a sample floor plan of an installed lift system and figure 1B to see a photo of the **P-600**. Refer to figures 2A, 2B, and 3 to familiarize yourself with the components of the **P-600** lift, and charger.

Components of the P-600 Lift system

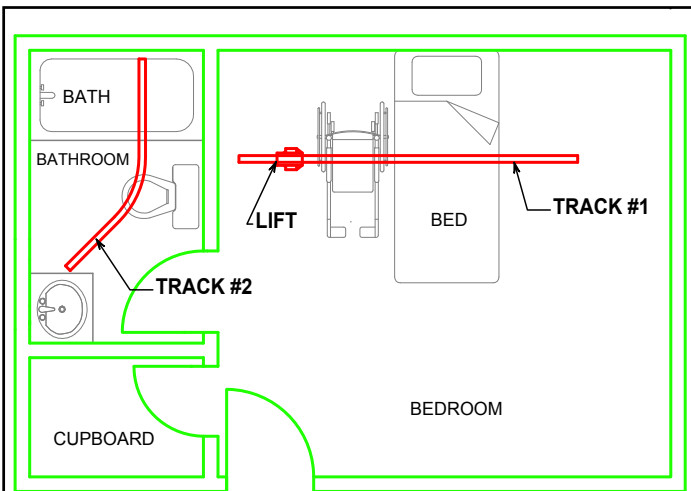


Figure 1A - Sample floor plan showing basic components of a portable ceiling lift system.

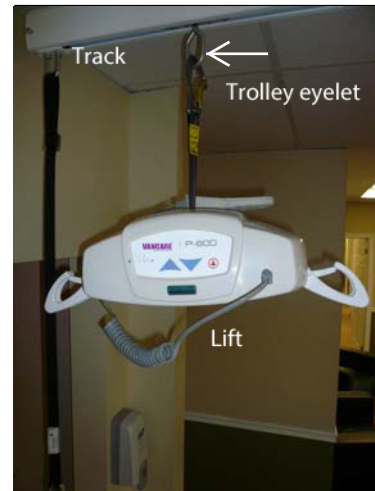


Figure 1B - **P-600** Lift mounted onto track



Figure 2A - Front View of **P-600** lift

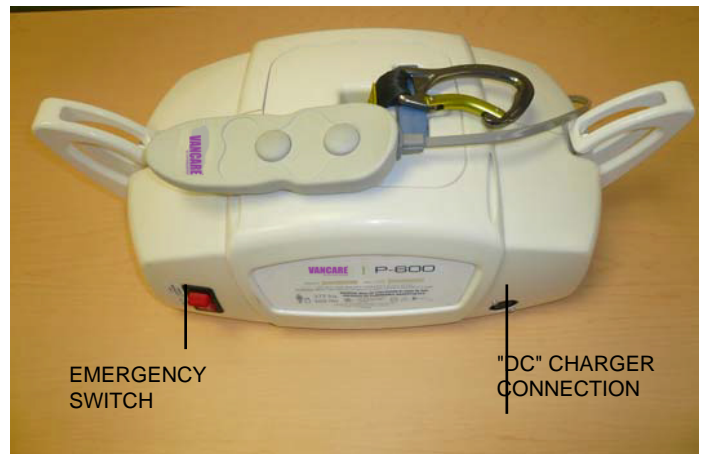


Figure 2B - Back view of **P-600** lift

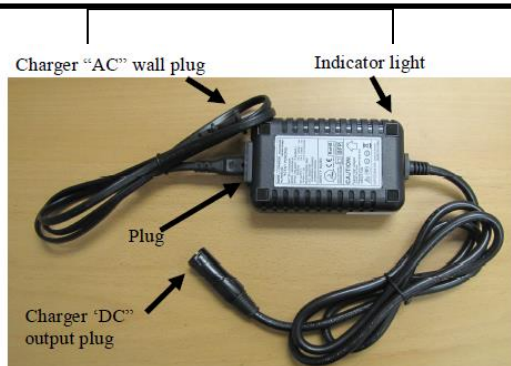


Figure 3 - Charger for **P-600** lift

Component List

The following components are included with your new **P-600** lift system:

- **P-600** lift
- Pneumatic Hand Control
- Lift Charger
- Owner's Manual
- Warranty Card


SLINGS: If a sling has been supplied with the lift refer to the instructions included with the sling.

ACCESSORIES: If additional accessories such as a turntable, or gate system, have been supplied with the lift refer to the instructions included with those items.

IMPORTANT: Before initial use, the lift unit must be charged for 5 hours. Refer to section titled "**Charging Instructions**". The hand control airline tube must also be connected to the lift. If it is not connected refer to the section titled "**Attaching the airline to the lift**".

Specifications of P-600 lift

Lift Motor:	24 VDC
Charger Input:	100-240 VAC, 0.35 Amps
Charger Output:	29.5 VDC, 1.3 Amps
Batteries:	24 VDC (2 x 12 VDC) 5.0 AH
Lift Case:	Flame Retardant ABS
Hand Control:	Pneumatic – Piston Displacement
Lifting Range:	Up to 1.96m
Lift Weight:	23 lbs (10.432 kg)
Maximum Load:	600 lbs (274.28 kg)
Internal Fuses:	15 Amp
Duty Cycle:	1 min "ON", 9 mins "OFF"
Rated Performance:	5-10 lifts at 600 lbs, 10% duty cycle, each lift being 24 inches at the middle of the lifting range (from 54" strap out to 30" strap out) per full battery

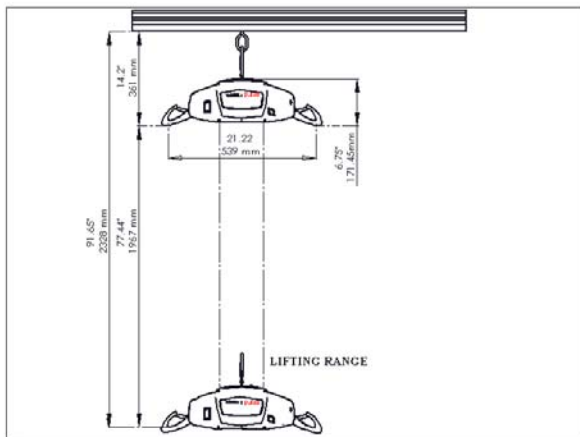


Models Table for P-600 Lifts	
Code	Description
303090	P-600 lift including charger and pneumatic hand control

Shipping/Storage Conditions:


Temperature: Shipping/Storage: -40 to +70 °C
 Relative Humidity: Shipping/Storage: 10 to 100% RH
 Atmospheric Pressure: Shipping/Storage: 500 to 1060 hPa

NOTES:

- Please use the following type of plug for **P-600** lifts installed in the UK:

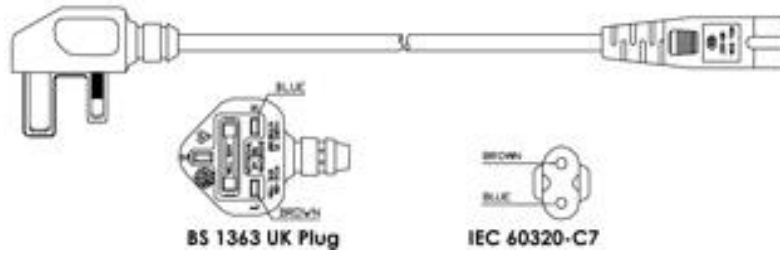

- Please use the following type of plug for **P-600** lifts installed in Australia.

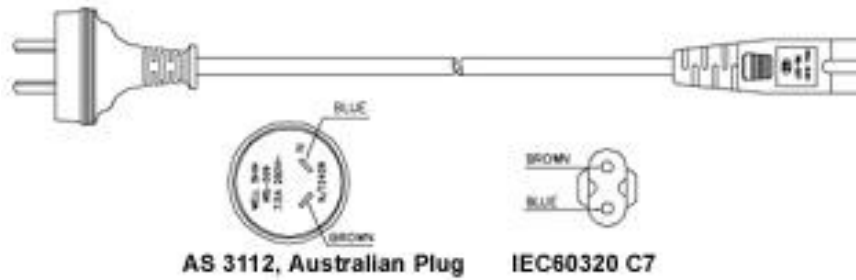

- The **P-600** lift shall be connected to a center-tapped single phase supply circuit when users in the United States connect the equipment to a 240 V supply system.

Glossary of Symbols used in the P-600

Mark	Symbol	Reference	Title	Mark	Symbol	Reference	Title
X		IEC 60417-5172	CLASS II equipment	X		IEC 60417-5840	TYPE B APPLIED PART
X		ISO 7000-0434	Caution risk of danger or Attention, consult ACCOMPANYING DOCUMENTS	X		IEC 60417-5010	“ON” / “OFF” (push-push)
X		IEC 60417-5665	BODY WEIGHT	X		ISO 7010-M002	Refer to instruction manual/booklet

Cautions

- The **P-600** must be installed prior to use. Contact your local authorized dealer to ensure that it is properly installed. The **P-600** must be installed only by persons authorized by Xcpectg0
- Under no circumstance should the track, lift and sling (s) or entire system be put in control of a person who has not been properly trained in the use and care of this equipment. Failure to adhere to this warning may result in serious injury to the operator, and/or the individual being lifted/transferred.
- The **P-600** lift and associated track and sling (s) are not toys. Do not use them for unsafe practices. Do not allow children to play with the lift or any of its components.
- The manufacturer's warranty is void if persons unauthorized by Xcpectg perform work on the **P-600** lift system.
- There are no user serviceable parts inside the cover. Do not remove cover screws, or open the lift unit, as this will **VOID THE WARRANTY**.
- In facilities where more than one operator will be responsible for using the **P-600** associated track and sling (s) it is imperative that all such members be trained in its' proper use. A training program should be established by the facility to acquaint new operators with this equipment.
- Never expose the **P-600** directly to water. Warranty does not cover any misuse or abuse of the lift system.
- To maintain optimum function, the **P-600** should be inspected and maintained on a regular basis. See the section titled "**General Inspection and Maintenance**".
- Any accessories used with the **P-600**, including track and sling (s), should be checked to ensure that they are in good working order. Check for signs of wear or fraying prior to use. Report any unusual wear or damage immediately to your local authorized dealer.
- The **P-600** and associated lift, track and sling (s) are intended **only** for lifting and transferring of a person. Xcpectg will not be responsible for any damage caused by the misuse, neglect or purposeful destruction of the lift and/or its' associated components.
- Do not in any circumstance exceed the maximum load of this lift. Refer to the "**Specifications**" section of this manual, and/or the labels on the side of the lift.
- The installation of the lift, track, accessories, and sling are certified to a maximum load. Do not exceed the maximum rated load of any of the components.
- There is a risk of explosion if the lift is used in the presence of flammable anaesthetics.
- Ensure that a clear space is maintained around the lift and track. Remove all curtain material and other obstacles out of the way before performing a transfer.

Operation

⚠ Caution: Always, before using the P-600 lift system, the lift, track and sling (s) must be visually checked for any unusual wear and tear. Refer to the user manual with each piece of supplied equipment to determine what should be checked. Should anything look unusual then contact your local dealer prior to use.

Failure to comply with this caution could result in serious injury to the operator, the individual being lifted and/or damage to the lift.

Turning the lift ON/OFF



Figure 4A - Methods to Turn the P-600 "ON"

To operate the lift it must first be turned ON. This can be done in several ways. The first method is to press the blue UP or DOWN buttons located in the middle front side of the lift. When this is done the ON/OFF indicator light located on the front left side of the lift will turn GREEN indicating that the lift is ON. Refer to figures 4B and 4C.

An alternative method is to press either the Grey UP or DOWN buttons on the hand control. Refer to figure 4A. When this is done the ON/OFF indicator light located on the front left side of the lift will turn GREEN indicating that the lift is ON. Refer to figure 4B.

To conserve battery power the lift will automatically shut off after approximately 2 minutes of non-use. However, it is recommended that the lift be turned off when not in use.

The light will turn ORANGE on the lift control panel and a slow beeping audible alarm will sound if the batteries are low and require charging. Complete the transfer that is in progress and then move lift to the end of the track where the charger is located. Following the ORANGE indicator, the light will turn RED on the lift control panel and a fast beeping audible alarm will sound indicating the batteries are fully discharged and require charging. When the battery is discharged the UP function will be disabled. The DOWN and EMERGENCY DOWN function will continue to operate. See figure 4D.

When the lift is connected to the charger and turned ON, the indicator light on the lift will FLASH ORANGE. Once the lift is turned OFF the indicator light will change to a solid ORANGE. This indicates that the lift is on charge. After one hour, the lift may be used, however, overnight charging is recommended. During charging the UP/DOWN functions will be disabled. The EMERGENCY DOWN function will continue to operate.



Figure 4B - The indicator light of the lift is normally off when not in use.



Figure 4C - When the lift has been turned "ON", the indicator light will turn green.



Figure 4D - If the indicator light is ORANGE or RED in color then the batteries of the lift are low and should be charged.

Operation

Raising/lowering the lift

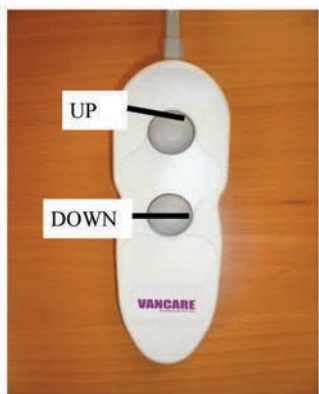


Figure 5A - Hand control



Figure 5B - Lift will move up and down the strap when the UP/DOWN buttons are pressed.

By pressing the DOWN arrow button, or the UP arrow button, the lift can be lowered or raised to the correct height for attaching the sling or positioning an individual. Refer to figure 5A and 5B

It is recommended that the caregiver (operator) steady the lift with one hand when it is close to the individual in the sling so that it will not accidentally sway and bump the individual or close object.



Figure 5C - Front Panel showing raising/lowering buttons

Alternatively, located in the middle front side of the lift unit is a panel that has UP and DOWN buttons. By pressing the DOWN arrow button, or the UP arrow button, the lift can be lowered or raised to the correct height for attaching the sling or positioning an individual. Refer to figure 5C.

It is recommended that the caregiver (operator) steady the lift with one hand when it is close to the individual in the sling so that it will not accidentally sway and bump the individual or close object.

Moving the lift along the track



Figure 6A - The lift is moved along the track manually, by pushing it with the hand. The trolley located inside the track will glide the lift along.

The lift can be easily moved along the track by simply pushing it by hand.

For ease of use it is recommended that the lift be first lowered to a comfortable height at which it can easily be pushed along the length of the track by hand.

Care must be taken when moving the lift along the track. Ensure that the lift or the individual in the sling of the lift does not come into contact with any objects such as desks, counters, walls, etc.

⚠ Caution: Always be cautious when moving an individual along the track. Watch out for and avoid any obstructions that may cause injury to the individual in the sling or damage to the lift.

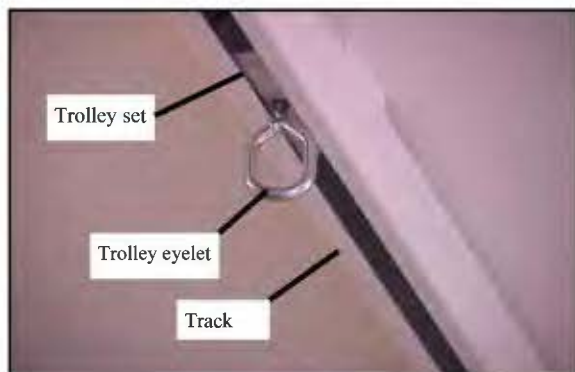


Figure 7A - Photo showing the lift trolley that is installed along the inside of the track. The eyelet of the trolley connects to the hook of the lift in one of several ways.

The lift moves along the track by means of a trolley assembly that is mounted inside the track. Each track location will have one of these trolleys installed.

The eyelet of the trolley hangs down below the track and provides the way of connecting the lift to the track. The wheels of the trolley are designed to move the lift along the track with very little effort.

Mounting the lift to the track

The first step in being able to use the **P-600** lift is to mount it onto the trolley of the lift track.

There are several ways of making this connection. Refer to figures 8A through to 11B to determine the type of ceiling connection that has been installed with the purchased system.

⚠ Caution: Always check to ensure that the lift hook is attached properly to the eyelet of the trolley, or the reacher, or the lanyard. The safety latch of the lift hook must always be in a locked position as shown in the close-up photos 8B, 9B, 10B and 11A.

Option 1 - Direct connection to trolley



Figure 8A - Photo showing connection of lift hook directly to the eyelet of the trolley.



Figure 8B - Photo showing close-up of lift hook connected directly to eyelet of trolley.

Option 2 - Connection with reacher



Figure 9A - Photo showing **P-600** lift carabiner connected to a reacher first and then to the eyelet of the trolley.

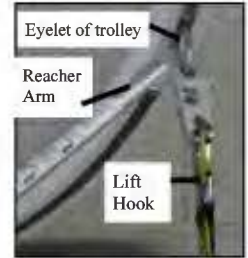


Figure 9B - Photo showing close up of **P-600** lift carabiner connected to a reacher first and then to the eyelet of the trolley.

Option 3 - Connection with lanyard



Figure 10A - Photo of lift hook connected to a **P-600** lanyard first and then to the eyelet of the trolley.

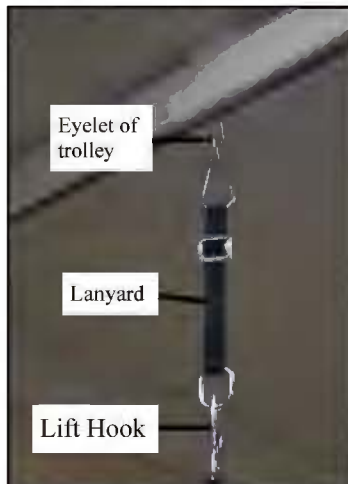


Figure 10B - Photo showing close-up of lift hook, lanyard and eyelet of trolley.

Option 4 - Connection with lanyard and Reacher arm Carabiner.

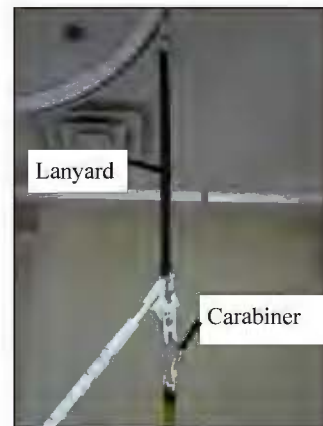


Figure 11A - Photo showing lift hook connected to a reacher & lanyard and finally to the eyelet of the trolley.

Basics in transferring an individual

⚠ Caution: The following steps are intended to generally describe the procedure involved in the lifting and transferring of an individual from one location to another using the lift, track and sling. Track configurations will vary by installation.

The manual for the sling that was purchased with the lift should be reviewed in detail prior to attempting these steps. Contact your local authorized dealer should you have any questions or concerns.

Step 1) Carry the **P-600** Lift to the desired transfer location. Set it on a secure object such as a table or chair. Let sufficient strap out of the lift so that the lift hook can be easily attached to the eyelet of the trolley without having to lift the lift. Attach the lift hook to the eyelet of the trolley as noted in the previous section titled “**Mounting the lift to the track**”. Lower the lift to a comfortable level so that it can easily be moved. Move it close to the individual that is to be transferred. Use the procedures for up and down and moving along the track as described in the previous sections titled “**Raising/Lowering the lift**” and “**Moving the lift along the track**”.

⚠ Caution: Always be cautious when raising or lowering the lift, or moving the lift along the track. Watch out for and avoid any obstructions that may cause injury to the lift.

Step 2) Prepare the individual being transferred with the appropriate sling. Refer to the instructions supplied with the sling that was purchased on how to properly outfit an individual with a sling.

⚠ Caution: Always make sure that the sling is correctly fitted and adjusted on each side of the individual so that maximum comfort and safety are achieved prior to lifting. Refer to the sling instructions that were supplied with the sling.


Step 3) Once the individual has been outfitted with the sling, move the lift so that it is positioned **directly over** the individual. The lift may need to be raised or lowered, or re-positioned along the track in order to accomplish this. Lower the lift so that the integral carry bar hooks are at a height that makes connecting the straps of the sling easy to accomplish. Steady the lift with one hand so that it does not accidentally come in contact with the head or body of the individual to be lifted.

⚠ Caution: Always check to ensure that when the lift is lowered that it does come in contact with the person being lifted. Steady the lift with one hand while it is being lowered near an individual.

⚠ Caution: Always check to ensure that the lift is correctly positioned directly above the person to be lifted. Over time, the lift strap may fray if this is not followed.

Step 4) Following the instructions provided with the sling. Attach the straps of the sling to the carry bar handles of the lift. The straps on each side of the sling are generally attached to the corresponding side of the carry bar hooks. Be sure to double check to ensure that the straps are properly attached to the carry bar hooks, and that the individual being lifted is properly positioned in the sling prior to lifting.

⚠ Caution: Prior to lifting an individual make sure that the straps of the sling are securely placed on the carry bar hooks and that the straps will not come off .

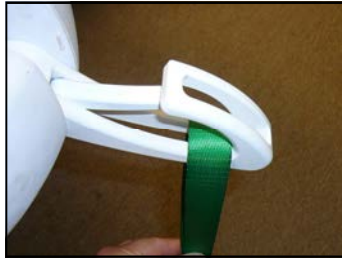

A)- Sling loop correctly positioned at the base of the P-600 carry bar hook.



B)- During the preparation for the patient transfer, the sling loop flipped over.

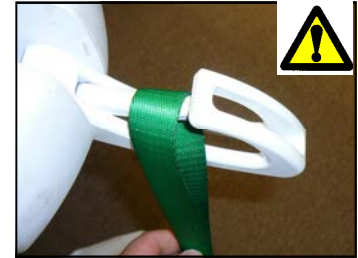


Figure 3 - Sling loop incorrectly resting on the P-600 hook locking clip.

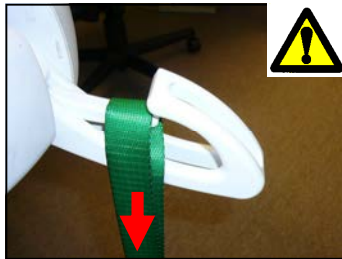


Figure 4 - Load applied to the P-600 locking clip. The sling loop begins to slide off the hook locking clip.



Figure 5 - Sling loop separated from the P-600 carry bar hook.

⚠ Caution: There is a risk for the strap to disengage from the hook, if a sling loop is allowed to rotate and rest on the latch. Please check to ensure that the loops are on the hook not resting in the latch. Failure to adhere to these instructions could result in serious injury or death.

For your safety and the safety of the patient, please always ensure that the sling loops are correctly positioned on the carry bar hooks. It is suggested to do the check of the sling loops once there is tension to the sling loops but prior to completely lifting the patient.

Charging the lift

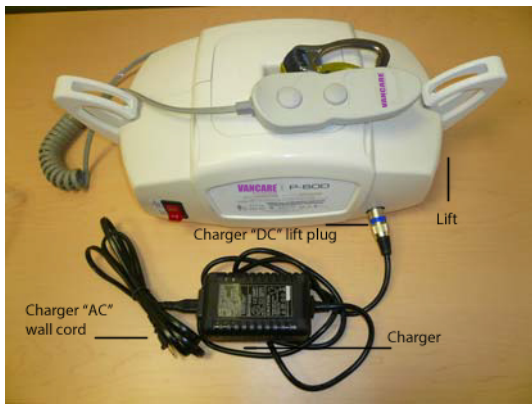


Figure 12A - P-600 lift and charger set on a secure table top or counter for charging.

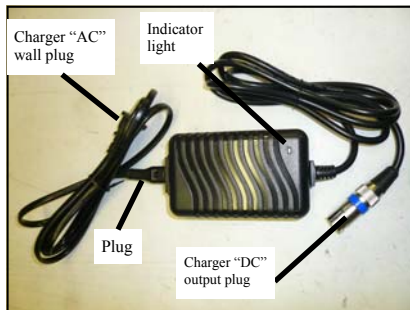


Figure 12B - Charger for P-600 lift

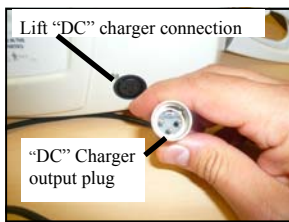


Figure 12C - Close-up of "DC" charger plug and lift "DC" charger connection. Note the 3 metal prongs on the end of the charger cord and 3 holes on the black "DC" connection.

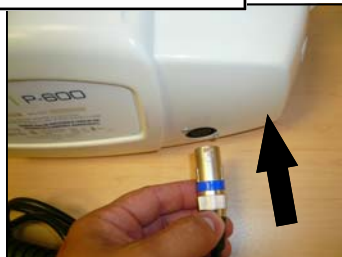


Figure 12D - Connect the charger to the lift. Be sure to line up the 3 metal prongs on the end of the charger with the 3 holes in the black lift "DC" connection.



Figure 12E - Charger is connected to the lift. The indicator light on the charger will be ORANGE indicating that the lift is charging.

⚠ Caution: The charger must be located outside the patient vicinity at all times. The patient vicinity is the space with surfaces likely contacted by the patient or an attendant who can touch the patient. This space is 6 feet (1.83m) beyond the perimeter of the bed, examination table, etc., extending vertically 7-1/2 feet (2.29m) above the floor.

The batteries of the lift should be charged on a regular basis. It is recommended that the lift be left on charge when not in operation, and at the end of each day. This will maximize the life cycle of the batteries.

The lift may remain connected to the charger indefinitely since the charger has a built-in regulator, eliminating the danger of overcharging.

Step 1) Familiarize yourself with the basic components of the charging system. Refer to figures 12A and 12B.

Step 2) Place the lift and charger on a safe surface such as a table or counter top. The surface must be clean and dry, and away from the reach of a child.

Step 3) Turn the lift OFF as described in the section titled **"Turning the lift ON/OFF"**.

Step 4) Plug the charger "AC" wall plug into a nearby wall outlet. The indicator light on the charger will turn GREEN.

⚠ Caution: Do not use an electrical extension to extend the reach of the "AC" wall plug.

Step 5) Take hold of the charger "DC" output plug and visually observe that it has three (3) prongs inside of its metal case. These are designed to fit into the three (3) holes that are located on the black lift "DC" connection. Refer to figure 12C.

Step 6) Take the charger "DC" output plug and connect it to the black lift "DC" connection being careful to ensure that the metal prongs from the charger plug fit into the holes of the black lift connector. When this is completed correctly, then the indicator light on the charger will turn ORANGE. Refer to figures 12D, E.

⚠ Caution: Do not operate the lift while it is connected to the charger.

After a minimum of 1 hour the charger can be disconnected from the lift, and the lift put into use. However overnight charging is recommended.

⚠ Caution: Do not allow the batteries to become discharged below the low battery alarm, as this will decrease overall battery life and performance.

⚠ Caution: Use only the charger that was supplied with the lift. Use of any other charger will void all warranties and may cause damage to the lift.

Emergency Lowering



Figure 14A –Lift showing DOWN button located on front right side of lift.

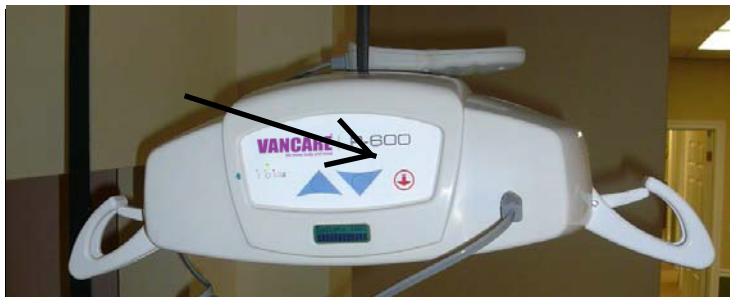


Figure 14B –RED emergency lowering button located on middle of the front of the lift.

The DOWN blue button located on the front right side of the lift can be used to lower an individual should the hand control buttons fail. Refer to figure 14B.

Should both DOWN arrow buttons on the hand control, and the DOWN button of the lift fail, the person may be lowered by pressing the RED emergency lowering button located on middle front side of the lift. There will be a delay of approximately 2 seconds before the lift starts to lower. An audible alarm will also sound during the emergency lowering. Refer to figure 14B.

IMPORTANT: The Emergency Lowering system does not provide a raising function. The failure of any of the lowering device should be reported to your authorized dealer immediately.

Emergency Stopping and Shut-off



ON/OFF Button
Figure 14C –RED Emergency stop switch located on the front left side of the lift.



Figure 14D - Close-up of switch
ON - Normal lift Operation
OFF - Emergency Stop

The lift normally shuts off if the lift has not been in use for 2 minutes.


Should a situation present itself such that the lift will not respond to the hand control buttons or on any of the normal operational control buttons on the front of the lift then the **RED Emergency stop switch** should be switched to the “OFF “ position. **This will shut off power going to the motor of the lift and will immediately stop all movement.**

Should the emergency stop function be used in an emergency, then before the lift can be used again, it must be inspected by an authorized dealer. Once the lift has been inspected and/or repaired, then the Emergency Stop Button can be set to the “ON” position. Normal use of the lift may then proceed.

Note: The lift will only charge if the Emergency stop switch is in the “ON” position. Refer to the section titled, “**Charging the lift**” for charging instructions.

LCD Display & Programming Functionality

- In any 'Default display mode', if the unit is in the charger the lift will go into Charging Display Mode regardless what the user has selected as 'Default Display Mode'. Charging Display Mode should over-ride Low Battery Mode.
- The lift will then:
 7. Display a flashing "Charging" with the percentage charged (in 10% increments) in the top row of the display (e.g., "Charging 60%").
 8. Show the appropriate number of fully blackened out cells, with the remaining cells in the bottom row flashing.

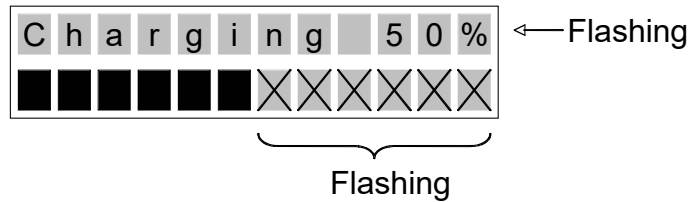

- **To enter programming mode:**
 - Hold the 'Up' and 'Down' buttons simultaneously for three (3) seconds.
 - The lift will then:
 9. Beep three (3) times. Display a flashing "Entering Programming Mode" for two (2) seconds.
 10. Go to the first programming option.
 - If the user continues to hold the 'Up' and 'Down' buttons for longer than the display flashes, "Entering Programming Mode", the unit will exit the programming mode.
- **To exit programming mode:**
 - If no buttons are pressed for ten (10) seconds the unit exits the programming mode automatically. The lift should then:
 11. Beep three (3) times. (the beep should be as loud as the existing emergency down alarm)
 12. Display a flashing "Exiting Programming Mode" for two (2) seconds.
 13. Go back to the standard display mode.
- **Programming Mode:**
 - Whenever in Programming Mode, the top line of the display should read, "PROGRAM MODE". Depending on what is being programmed, the second line should then change:

P	R	O	G	R	A	M		M	O	D	E
D	i	s	p	l	a	y			B	A	T
 - Using the 'Up' and 'Down' buttons, the user should then be able to cycle through their choices.

P600 PM RESET PROCEDURE

ONLY USE THIS PROCEDURE IF YOU HAVE COMPLETED THE PM AS OUTLINED IN VANCARE MANUAL

- (1) Turn unit off with red toggle switch on back of lift
- (2) Press BOTH up and down buttons on the hand control down at the same time and HOLD down
- (3) Turn Unit on with red toggle switch on the back of the lift while STILL holding down on the UP and Down buttons on the hand control
- (4) CONTINUE to Hold both buttons down until rapid beeping STOPS
- (5) Once Rapid Beeping has stopped, release both buttons. (PM total lifts and PM total Hours is reset)

To verify the reset is complete.

- (1) Press up or down momentarily so that display lights up
- (2) With Display lit up reading Battery % Press and hold BOTH up and Down buttons on the Hand control (screen will read Entering PROGRAMING MODE)
- (3) Continue to hold BOTH buttons down until display reads PROGRAM MODE Release buttons and beeps, then release buttons
- (4) After being stops, Promptly press the up button and scroll to Maintenance PM Hours. Display should read/display PM_ Hours 00.00.00. If it does not, repeat steps 1-5 above and the verify process 1-4

Should you require further assistance please call your local distributor

Attaching the airline tube to the lift



Figure 15A - Gray rubber grommet located on front right side of the lift. Rubber airline is not connected. Note ridge on grommet.



Figure 15B - Gray rubber airline being inserted into rubber grommet of lift. The ridges on both pieces are lined up. The metal ribbed pins are on the airline (within the shroud).

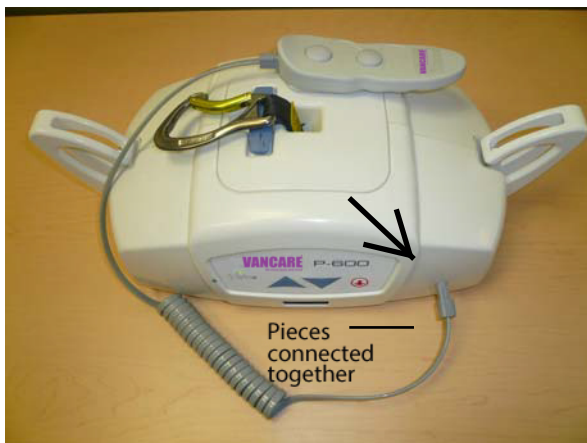


Figure 15C - Gray rubber airline being inserted into rubber grommet of lift. The ridges on both pieces are lined up. The metal ribbed pins are on the airline.

Should the gray rubber airline that connects the lift to the hand control become disengaged from the front left side of the lift it must be re-connected in order for the lift to work properly.

The rubber airline may become disconnected for the following reasons:

- 1) The lift is pulled along the track by the airline.
- 2) The tubing accidentally gets wrapped around an object while a lift or transfer is being performed.
- 3) It is accidentally pulled out by the caregiver or the individual being lifted.

The airline is connected to a gray rubber grommet located on the front left side of the lift. Refer to figure 15A.

Small metal ribbed pins located at the end of the airline hold the airline to this rubber grommet in a specific manner. Therefore it is important to make sure that the airline is connected properly.

Both the gray airline and the rubber grommet have a ridge on one of their sides. Align the ridges for proper connection. Refer to figure 15B. When this is done then the metal ribbed pins attached to the end of the airline can be re-inserted into the corresponding holes in the rubber grommet located on the front left side of the lift. Be sure to insert the pins into the gray rubber grommet sufficiently so that it is secure. Refer to figure 15C.

Perform a brief test of the lift to ensure proper connectivity. Turn the lift ON and OFF. Raise and lower the lift.

If the lift does not work properly, check to ensure that the ridges on the gray rubber grommet on the underside of the lift and the airline tubing are lined up properly. If they are not lined up properly, then remove the airline, line up the ridges and then re-insert it into the rubber grommet. Perform the test as noted in the preceding paragraph. If there are still problems with the lift then contact your local authorized dealer for service.

Cleaning, Disinfection and Sterilization

The exterior of the lift should only be cleaned, disinfected and sterilized using isopropyl alcohol. Damp a cloth with isopropyl alcohol and wipe down entire exterior of lift including strap and hook. No other chemicals and/or liquids should be used to clean, disinfect and sterilize this lift.

⚠ Caution: Take great care to ensure that no liquids get inside the lift. This lift is not drip proof or water tight. Failure to protect the lift from liquids may result in damage to the lift and/or may cause personal injury.

Turning the hooks upwards

The P-600 has a feature that allows for the hooks to be turned upwards as shown. This may be used for transporting or storing the lift.



Figure 16A - P-600 with hooks in normal position



Figure 16B - P-600 with hooks turned upwards.

Trouble Shooting

Should problems arise with the use of the **P-600** lift review the following chart. Find the fault and complete the recommended solution. If the fault is not found and/or the solution does not correct the problem contact your local authorized dealer for service immediately.

Fault	Recommended Solution
The airline tubing that connects the hand control to the lift has become disengaged.	Refer to the section of this manual titled “ Attaching the airline tube to the lift ”. If this does not correct the problem then contact your local authorized dealer immediately so that the lift can be checked to ensure proper continued operation.
The hand control buttons do not operate according to their designations (e.g. the UP button initiates a down movement).	The airline tubing has not been connected correctly. Refer to the section of this manual titled “ Attaching the airline and hand control to the lift ”. If this does not correct the problem then contact your local authorized dealer immediately so that the lift can be checked to ensure proper continued operation.
The lift does not operate up or down even when the airline has been properly connected.	The indicator light on the front right side of the lift should be GREEN. Press the ON/OFF button or UP/DOWN arrow buttons on the hand control. This should activate the lift and the indicator light turn GREEN. If the lift still does not function, then the batteries may be low and require charging. Refer to the section of this manual titled “ Charging the lift ”. Charge the lift for at least one hour and then try to raise and lower it.
The GREEN light on the left front side of the lift is ON and the lift does not operate in the DOWN direction.	There is a built-in slack tape detector in the lift. This may be sensitive. Take hold of the lift strap about 10 centimetres above the top of the lift and pull it upwards in order to tighten the lift strap, and then press the DOWN button. If this corrects the problem temporarily but not permanently then contact your local authorized dealer so that the lift can be checked to ensure proper continued operation.
The red indicator light on the left front side of the lift turns RED and/or a loud alarm sound is heard when an individual is raised.	The batteries are low and require charging. Refer to the section of this manual titled “ Charging the lift ”. Charge the lift for at least one hour and then try to raise and lower it. If this does not correct the problem then contact your local authorized dealer immediately so that the lift can be checked to ensure proper continued operation.
One side of the lift tape (strap) is starting to fray after continued use.	Check to be sure that the lift is always directly above the individual being lifted. Refer to the section titled “ Basics in transferring an individual ” for correct lift positioning. If fraying still continues then contact your local authorized dealer immediately so that the lift can be checked to ensure proper continued operation.
The lift does not pass through a track component such as a turntable or gate.	Refer to the “Owners Manual” for the specific piece of equipment in question. If the recommended solution does not correct the problem then contact your local authorized dealer immediately so that the lift can be checked to ensure proper continued operation.

General Inspection and Maintenance

A) Each Use - To be completed by User

Prior to each use the **P-600** lift and associated track, accessories and sling (s), must be visually inspected. Refer to the accessory and sling user guides for specific details regarding their inspection.

Should any of the these items fail the inspection do not use the lift
Contact your local authorized dealer for service.

Visually check for the following:

- The lift strap shows NO signs of fraying or breaking along its entire length.
- The stitching on the lift strap where it connects to the lift hook shows NO signs of fraying or breaking.
- The sling (s) that will be used show NO signs of unusual wear or damage. The straps of the sling that connect to the carry bar hooks of the lift show NO signs of fraying or breaking.
- The airline tube that connects the hand control to the lift is not kinked, twisted, knotted, cut or damaged.
- All the functions on the hand control work correctly (e.g. UP/DOWN).
- The brackets that hold the track in place on the ceiling are secure and do not move or appear loose.
- The lift has no unusual sounds when it is moved UP/DOWN or along the track..
- Ensure that there are end stops installed at each end of the track.
- There are not cuts, dents or sharp edges on the carry bar hooks that may damage straps of the sling.
- The carabiner hook shall be visually inspected before and after each lift for damages.

B) Monthly - To be completed by User

Should any of the these items fail the inspection do not use the lift.
Contact your local authorized dealer for service.

- Complete the visual inspection as noted in the “Each Use” section above.

With no one in the sling nor attached to the lift check the following:

- The lift moves freely along the entire length of the track.

C) Semi-Annual or Yearly - To be completed by a lift technician

Consult your local authorized dealer for advice on whether this section should be completed every 6 months or on a yearly basis. Generally, in frequent use, or in situations where heavier than normal clients are lifted, or in multi-user environments such as in institutions the lift should be checked every 6 months.

- Complete the visual inspection as noted in the “Monthly” section above.



This section to be only completed by a qualified service technician as authorized by Xceptg0

- Lift checked and passed. Any required repairs completed.

Lift Accessories

The following is a list of available accessories for the **P-600** lift. Items such as the track, turntables and brackets are installed at the time of purchase. Add-on pieces are available to after the initial purchase, however your local authorized dealer must be consulted as to suitability, purchase and installation.

Slings are the most common after purchase accessory. A variety of styles, sizes, and colors are available. Custom slings can also be manufactured to meet special needs. Consult your local authorized dealer for details, pricing and a complete list of current sling models.



TRACK
1.82MTR (6FT) LENGTH
2.5MTR (8FT) LENGTH
MAY BE CUT AT TIME
OF INSTALLATION



TRACK
5.0MTR (16FT) LENGTH
MAY BE CUT AT TIME
OF INSTALLATION



TRACKPLUS TRACK
5.0MTR (16FT) LENGTH
6.0MTR (19FT) LENGTH
MAY BE CUT AT TIME
OF INSTALLATION



TRACK
45 DEGREE CURVE
MAY BE CUT AT TIME
OF INSTALLATION



TRACK
90 DEGREE CURVE
MAY BE CUT AT TIME
OF INSTALLATION



TRANSGATE SYSTEM



MULTI-PORT TURNTABLE SYSTEM



QUICK FIT TURNTABLE SYSTEM



TRACK END STOP




**"H" SYSTEM TROLLEY SET
USED ONLY WITH "H" FRAME
AREA COVERING SYSTEM**



WALL MOUNT BRACKET



3" TRACK BRACKET

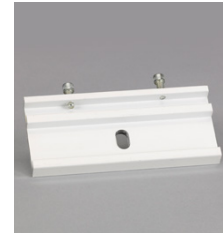

6" TRACK BRACKET



**VARIOUS STYLES AND SIZES OF SLINGS.
CUSTOM SLINGS AVAILABLE.**



REACHER

**ACCESSORIES NOT TO SCALE.
FOR ILLUSTRATIVE PURPOSES ONLY.**

**NOTICE: ACCESSORY SIZE, STYLE, SHAPE, LENGTH,
CONFIGURATIONS, OPTIONS, COLOURS AND
SPECIFICATIONS
MAY CHANGE WITHOUT PRIOR WRITTEN NOTICE.**

CONTACT YOUR LOCAL AUTHORIZED DEALER FOR DETAILS.



**CAUTION: ONLY SLINGS AUTHORIZED BY XPECTG ARE TO BE USED
WITH THIS LIFT. CONTACT YOUR LOCAL AUTHORIZED DEALER FOR DETAILS.**

Service Record History - Initial Information

- Complete the following section on **Purchase and Service Information** as soon as this equipment is installed.
- Use the service record history to record to any completed service and repairs.
- Ensure that the service record is signed and dated each time it is used.
- Be sure to have this piece of equipment serviced on a regular basis as described in the General Inspection and Maintenance Section

PURCHASE INFORMATION:

Product Name: **P-600** lift **Model:** _____

Serial#: _____

Date of Purchase: _____ **Date Installed:** _____

Purchased From: _____

Address: _____

City: _____ **Postal Code:** _____

Telephone No: _____

Comments:

SERVICE INFORMATION:

Contact the following company for service:

Company: _____

Address: _____

City: _____ **Postal Code:** _____

Telephone No: _____

Comments:

Service Record History

Complete this section after each service, repair inspection and/or maintenance. Photocopy additional pages as required.

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Service Record History

Complete this section after each service, repair inspection and/or maintenance. Photocopy additional pages as required.

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Service Record History

Complete this section after each service, repair inspection and/or maintenance. Photocopy additional pages as required.

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: <input type="checkbox"/> Periodic Inspection <input type="checkbox"/> Monthly Inspection <input type="checkbox"/> 6 Month Inspection <input type="checkbox"/> Repair <input type="checkbox"/> Yearly Inspection <input type="checkbox"/> Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			



Final Checklist and Inspection Commissioning Cover Sheet

Client Name: _____

Client Address: _____

Order Number: _____

Number of Pages Including Cover
Sheet: _____

Date: _____

Client Signature: _____

The above signed acknowledges the receipt of the completed
Certified Inspection Information attached herein.



SO# _____

Delivery Ticket

Delivered to: _____

Address: _____

Product Description: _____

Serial #'s: _____

I, the client, or an authorized representative of the above client, acknowledge receipt of the attached equipment, service and/or supplies and am satisfied with work completed by Vancare and/or Vancare representative. I was demonstrated the proper use of the slings, hand controls, and the operations of the lift(s) or products I received, if applicable. I am in receipt of the owner's manual with information. I understand that any system must be periodically inspected for loose fittings, and I will not operate the lift with a frayed or worn sling. Every product sold or rented by our company carries a manufacturer's warranty. Vancare will notify all clients of the warranty coverage, and we will honor all warranties under applicable law. I understand that using the system other than instructed, using unauthorized equipment and/or having repairs or modifications by others not certified to complete the work will void the warranty. The warranty does not cover misuse or unauthorized maintenance or any other events beyond our control. Shipping of parts or any other shipping charges that occur at the responsibility of the owner/client and will be invoiced accordingly, if applicable. I have been instructed and understand the coverage on the product that I have received.

Client Signature: _____

Print Name: _____ Date: _____

Vancare Representative Signature: _____

Print Name: _____ Date: _____

Vancare, Inc.
1515 1st St Aurora, NE 68818
800-694-4525
www.vancare.com

Refer to the bulletin entitled "Initial and Preventative Manintenance Procedure" for further instruction.

Facility: _____

Address: _____

Room Number: _____

SWL of System: _____

Checklist Item	Inspection			Installer initials	Specification
	Yes	No	N/A		
Track Inspection:					
Endstops	Yes	No	N/A		Endstops are in place and tightened to 12-14 ft. lbs.
Set Screws	Yes	No	N/A		Apply Blue Loctite (243). Tighten to 40-45 in. lbs
Ceiling brackets	Yes	No	N/A		Fully tightened
End stop safety pins	Yes	No	N/A		All track ends have a safety pin and split ring behind the endstop
Endcaps	Yes	No	N/A		Installed.
Track joints	Yes	No	N/A		Level and smooth. Lift rolls over gaps smoothly.
Gate assembly	Yes	No	N/A		Ensure that the gate safety system is functioning corectly. Should be bolted securely so that no movement is apparent.
Turntable	Yes	No	N/A		All stops in place, turntable rotates freely.
Track	Yes	No	N/A		Track is level
Track placement	Yes	No	N/A		Track is installed per correct dimensions and placement in the room in accordance with either shop drawing or customer verification
Structure Inspection					
Support Bracing	Yes	No	N/A		Support points shall feel structurally firm and display little perceptible movement laterally or longitudinally when a force of approximately 160N (35 lbs of force) is applied in a horizontal plane by firmly grasping and shaking the rail.
SWL Sticker (8-620720)	Yes	No	N/A		Complete and place SWL stickers (8-620720) on the track system no more than 20ft. apart so they are visible to user. The SWL will determine the parameters for Load, Difection and Function Test.
Tested Weight: _____ lbs	Yes	No	N/A		Anchors tightened per anchor manufacturers' specifications. Using 150% of system's SWL, test all attachment points by hanging weights below them.
Deflection Measured: _____	Yes	No	N/A		1 mm over every 200mm measured from middle of span. 100% of SWL.
Function test	Yes	No	N/A		100% of system's SWL through entire track system (including accessories such as smoke doors); system should be visually/audibly observed for movement or loud noises
Vertical rods and structural fittings	Yes	No	N/A		As per approved drawing and/orVancare, Inc. Recommendation.
Lift Inspection					
Lift Charging	Yes	No	N/A		LED display on charger and lift indicates charging function is operational.
Trolleys	Yes	No	N/A		Fixed Lifts - All rings & retaining rings in place. Portable Lifts - Cotter/thrust-pin in place. No movement of nut.
Carry Bar	Yes	No	N/A		Install strap pin. Verify swivel function.
Lifts	Yes	No	N/A		Any controls on unit (including emergeny lowering) work properly.
Upper Limit Switch	Yes	No	N/A		Ensure that the lifting motion stops when the triple tape thickness meets the rollers.
Lower Limit Switch / Slack Tape Switch	Yes	No	N/A		Ensure that the lowering motion stops when the tape is completely unwound. Also ensure lowering motion stops when there is slack in the lift strap.
Handset Functions	Yes	No	N/A		Test all functions on the hand control to confirm they are functioning properly.
Charging Endstop	Yes	No	N/A		Installed and operating properly. Lift docks and charges properly. Tightened to 12-14 ft. lbs.
Cleaning/Miscellaneous					
Interior Track Cleaning	Yes	No	N/A		Use a dust wand to clear out any dust and debris within the track
Exterior Track Cleaning	Yes	No	N/A		Use a soft scrub bleach to clean any scuff marks on the track

Lift Serial Numbers: _____

Facility Representative: _____
Print Name
Signature

Vancare Representative: _____
Print Name
Signature

Date / Time _____

Ceiling Lift - Preventative Maintenance							
Facility:			Contract Dates:		To:		
Address:			Scheduled:		Actual:		
Room Number:			Next PM Check:				
Lift Model:			Number of Lifts Since Last PM:				
Lift Serial Number:			Additional Service Needed?		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	
Lift Functions:	Description:	Pass Inspection:			Problems:	Fixed:	
UP, DOWN, EMRG. DOWN, TRAVERSE, ON/OFF, EMRG. ON/OFF	Check functions using the buttons on the lift.	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
Mechanical Functions:	Description:	Pass Inspection:			Problems:	Fixed:	
Load Test Per CSA Z10535.2-17	Lift 100% of the load capacity of the Motor 20" off of the ground	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
Trolley Wheels	Inspect wheels for flat spots, and excessive wear and tear	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
Portable Trolley	Ensure nut and pin are intact and tight	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
Motor, Gears, and Traversing Drive	Inspect for damage and excessive noise	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
Carry Bar	Inspect for damage; verify insert and hooks and strap pass through hole.	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
Fraying of Strap Edges	Lower the strap down to the ground and inspect the full length of the edges. Remove the plug from the carry bar; inspect the strap integrity around the pin.	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
Pneumatic Hand Control:	Description:	Pass Inspection:			Problems:	Fixed:	
UP, DOWN, EMRG. DOWN, TRAVERSE, ON/OFF	Press each button on hand control for 10 seconds, make sure button function works continuously.	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
Airline Tubing	Inspect for damage/leaks	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
Grommet Connectors	Check that they are tight	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
Limit Switches:	Description:	Pass Inspection:			Problems:	Fixed:	
Upper Limit Switch and Angle Detection	Hold UP until the carry bar is at the top. Motor should stop automatically.	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
	Let the strap out all the way to the ground. Motor should stop before strap winds backwards.	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
	While using either UP or Down , angle the strap more than 15 degrees. Motor should stop automatically.	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
Slack Tape Switch	Hold DOWN and lift up on the carry bar. Motor should stop automatically.	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
Electrical Functions:	Description:	Pass Inspection:			Problems:	Fixed:	
Battery Voltage:	Check batteries with multimeter and confirm 12V reading while engaging the motor during load test. Be sure to fully tighten brackets after removal.	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
Battery Inspection	Check physical condition and ensure battery has install date on it.	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
Charing End Stop	Confirm that lift enters charging end stop without resistance; lift docks and charges properly.	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
Miscellaneous	Description:	Pass Inspection:			Problems:	Fixed:	
LCD Screen:	Check that LCD works properly	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
LED Light:	Check that light turns green when on, dark when off, and amber when charging.	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
Casing	Check for cracks or wear in case	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
PM Reset	Use hand control to end program mode. Log # of lifts in upper right corner on this sheet. Reset the PM Counter.	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
PM Sticker (8-620710)	Complete and place a PM Sticker on the track.	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL
SWL Sticker (8-620720)	Ensure SWL information is still accurate and readable	<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL	<input type="checkbox"/> N/A		<input type="checkbox"/> PASS	<input type="checkbox"/> FAIL

Vancare Distributor:

Customer:

Ceiling Track - Preventative Maintenance						
Facility:			Contract Dates:		To:	
Address:			Scheduled:		Actual:	
Room Number:			Next PM Check:			
SWL of System:			Additional Service Needed?		<input type="checkbox"/> YES <input type="checkbox"/> NO	
Track Inspection:	Description:	Pass Inspection:			Problems:	Fixed:
Endstops	Check that endstops are in place and tightened to 12-14 ft. lbs.	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Set Screws	Visually inspect; reapply Blue Loctite (243) and tighten to 40-45 in-lbs. of torque if required	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
End Stop Safety Pins	Confirm that all track ends have a safety pin and split ring behind the endstop	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Endcaps	Confirm that all track ends have endcaps installed	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Gantry Trolleys	Check for flat spots on wheels and any excessive wear and tear; Safety pins in place and functional; Set screws tightened; Loctite used on set screws.	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Track Joints	Run a lift or trolley through a track joint and confirm that the transition is smooth	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Transition Gate	Inspect track joints into the transition gate, confirm that it is functioning properly and the pin falls down easily, roller bearing in place; pin and connection are working properly.	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Turn Table	Inspect track joints into the turntable, confirm that it is functioning properly	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Smoke Barrier Assembly	Doors spring back and forth without hindrance; no visual damage to any of the gaskets; all screws are tight; no signs of wear/ deformation on any components including the hinge doors	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Track	Track is level	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Structure Inspection:	Description:	Pass Inspection:			Problems:	Fixed:
Bracing	Wiggle the ends of the track to confirm minimal movement	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Anchor Testing	Using 100% of system's SWL, test all attachment points by hanging weights below them	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Deflection Test	1 mm over every 200 mm measured from middle of span. 100% of system's SWL	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Function Test	100% of system's SWL through entire track system (including accessories such as smoke doors); system should be visually/ audibly observed for movement or loud noises	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Charging System:	Description:	Pass Inspection:			Problems:	Fixed:
Charger and connections	Visually check all contact points and connections	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Voltage	Use a voltmeter to check output (24-28V)	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Charging End Stop	Confirm that lift enters charging endstop without resistance; end stop has power and motor charges.	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Cleaning/Miscellaneous:	Description:	Pass Inspection:			Problems:	Fixed:
Interior Track Cleaning	Use a dust wand to clear out any dust and debris within the track	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Exterior Track Cleaning	Use a soft scrub bleach to clean any scuff marks on the track	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
PM Sticker (8-620710)	Complete and place a PM sticker (8-620710) on the track.	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
SWL Sticker (8-620720)	Ensure SWL information is still accurate and readable	<input type="checkbox"/> YES	<input type="checkbox"/> NO	<input type="checkbox"/> N/A		<input type="checkbox"/> YES <input type="checkbox"/> NO
Vancare Distributor:						
Customer:						
Print			Sign		Date	

VANCARE[®]

We move body and mind

If you have any questions about the manufacture or operation of this equipment, please contact Xcpectg, or your local authorized dealer.

Manufactured for:
Xcpectg. "Kpe
3737"3uv'Uv
"Cwtqtc, P G 8: : 3:

Telephone: (: 22) 8; 6/6747 Fax: (624) 8; 6/5; ; 6

VANCARE Ceiling lift Skills Observation Assessment

Staff Member Observed _____

Date _____

PROCEDURE - DID THE EMPLOYEE:

- Have the required number of staff members present?
- Select the correct size sling?
- Inspect the sling and lift for damage and proper operation?
- If **DAMAGED**, did the employee get another lift/sling and notify charge nurse?
- Correctly position the sling so that the bottom center of the sling is at the tailbone?
- Perform environment assessment and move objects that would impede operation of lift
- Move the lift into position with the hanger bar in the "H" position in front of the resident
- Lower the lift using the Pendant Switch?
- Connect the sling loops to the hanger bar hooks? Use the same loops on each side?
Double check the sling attachment to the lift
- Lift the resident only as high as necessary
- Moving the lifter with a patient in the sling?
- Lower the lift until the resident is sitting on the chair or lying on the bed
- Remove the sling loops from the hanger bar hooks, and prevent the hanger bars from coming in contact with the patient
- Back the lift away from the resident and remove the sling?
- Make certain the resident is safe and comfortable before leaving

KNOWLEDGE – CAN THE EMPLOYEE:

- Identify lifting capabilities (maximum weight)
- Identify location and use of Emergency Stop Switch?
- Identify location and use of Emergency Lowering?
- Identify location and use of Auxiliary Up/Down Switch?
- Identify Low Battery Indicator light and/or LCD Battery Display?
- Demonstrate how and when to recharge batteries?
- Use the Scale attachment properly?
- Identify sling parts: head support, shoulder loops, leg supports, leg loops, stabilizing handles?
- Demonstrate ability to adjust angle of recline to maintain hip precautions?
- Demonstrate transfer of patient, using Vancare ceiling lift, from bed to to chair, chair to bed, and floor to bed?
- Demonstrate proper understanding of how to clean the sling and lift?

Refer to Operator's Manual for more detailed description of transfer technique.

Pass

Fail

Observations _____

Observer's Name _____

Observer's Signature _____